
comfortel

zippy washlounge

#1180 #1185 ZIPPY TEXTURED BLACK ZIPPY BLACK

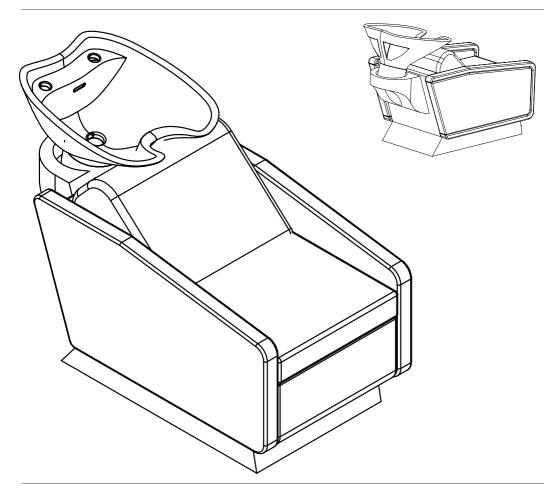

GENERAL SAFETY

- 1. Read carefully and keep these instructions in a safe place.
- Use this product only for its intended function and do not use attachments not recommended by the manufacturer.
- 3. Do not use outdoors.

PLUMBING

1. This unit must be plumbed by a licensed plumber.

ALL PLUMBING MUST BE COMPLETED BY A LICENSED PLUMBER


🚹 IMPORTANT

DO NOT ALLOW CHILDREN AROUND THE WASHLOUNGE WHEN IN USE


GET STARTED

ΖΙΡΡΥ


Wash Lounge

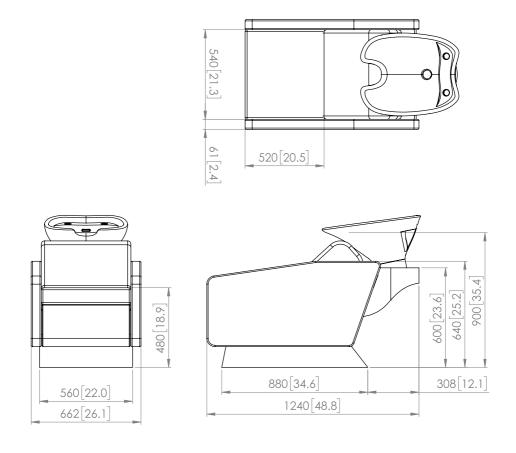

POSITIONING

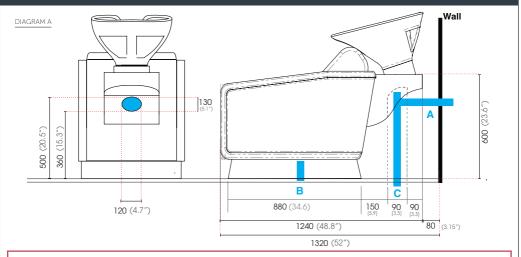

If washing from behind, add a minimum of 400mm (15.75") of space behind your wash lounge to provide room for access.

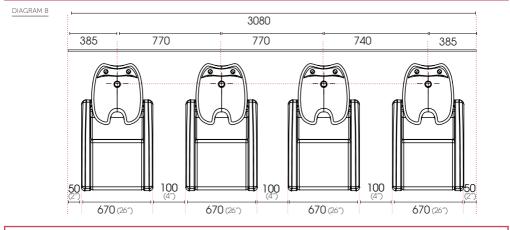

If washing from side add 400mm (15.75").

All measurements in mm (inches).

BEFORE INSTALLING YOU SHOULD CONSIDER THE FOLLOWING

- Allow for the necessary room around the unit for free movement.
- If installing against a wall, a minimum distance of 80mm (3.15") between wall and bottom back of basin is required to allow free movement of basin.
- If plumbing location is in wall (see Diagram A).
 For neatness of finish it is preferable to bring water and waste into the wash lounge in the same hole.
- If plumbing location is on floor (see Diagram A), place wash lounge over.

PLUMBING ACCESS OPTIONS

Determine the best way to connect plumbing.

OPTION A: FROM WALL TO BASIN STAND From behind the basin stand connect plumbing to the wall


OPTION B: FROM FLOOR BENEATH SEAT From under the chair seat connect plumbing to the floor

From under the chair seat connect plumbing to the floo

OPTION C: FROM FLOOR TO BASIN STAND From under the basin stand connect plumbing to the floor

ALL PLUMBING MUST BE COMPLETED BY A LICENSED PLUMBER

BEFORE INSTALLATION SECURE AND BOLT DOWN

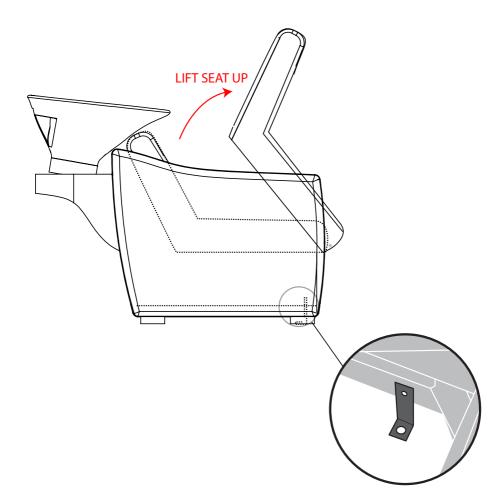




THE WASH LOUNGE MUST BE SECURED TO THE FLOOR.

Making sure your wash lounge is supported from behind, remove the back panel by unscrewing the two screws located on the left and right of the access panel. Fix to the floor through connector brackets using bolts.

INSTALLATION & ASSEMBLY: BASIN STAND

DIAGRAM D

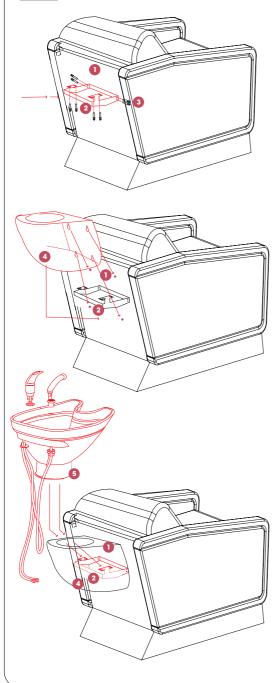

BASIN ASSEMBLY

- 1. Opening at back of chair
- 2. Steel frame
- Bolts (supplied)
- 4. Stainless steel cover
- 5. Ceramic basin

INSTALLING BASIN

- Undo bolts and remove steel frame from the opening of the back of chair.
- Flip steel frame over and re-bolt onto the inside of the chair using bolts supplied.
- Secure and bolt on the stainless cover onto the steel frame.
- Using 4 x bolts/nuts provided, install ceramic basin onto steel frame and tighten.
- Check the basin is balanced. If not balanced, adjust the bolts to ensure that the basin is balanced correctly.


IMPORTANT

PLEASE MAKE SURE THERE IS SUPPORT AT THE BACK OF THE WASH LOUNGE WHERE THE WASH BASINS ARE LOCATED, AS ONCE THE SEAT CUSHION IS REMOVED - THE UNIT COULD TILT BACKWARDS.



ASSEMBLY: PLUMBING

DIAGRAM C

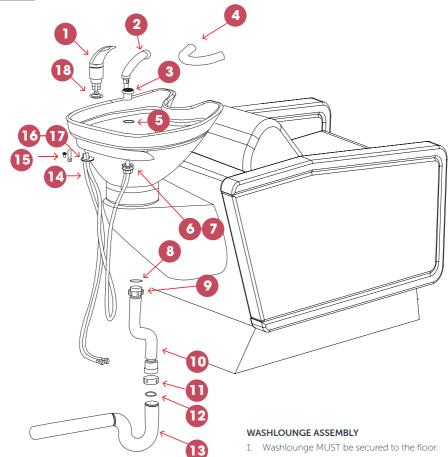

BASIN ASSEMBLY

- 1. Flick Mixer
- 2. Showerhead
- 3. Showerhose basin collar
- 4. Comfortneck
- 5. O-ring
- 6. Foam washers
- 7. Plastic nut
- 8. Flat seal
- 9. Fitted flange

- 10. Flexible waste pipe
- 11. Flange
- 12. Seal
- 13. P trap (not supplied)
- 14. Hot and cold braided hoses
- 15. Long nut
- 16. Plastic washers
- 17. Metal washers
- 18. O-ring

BASIN ASSEMBLY

- Install Flick Mixer using O-ring, plastic and metal washers & (Long Nut) and Shower Head using the Showerhose Basin Collar, O-ring, Foam Washer & Plastic Nut as indicated.
- 3. Place Flick Mixer and Shower Hoses through the holes in the basin.
- Connect Flexible Waste Pipe to Plug and Waste which is already installed making use of the with Flat Seal and fitted Flange.

PLUMBING CONNECTION

- 5. Connect Flexible Waste Pipe to P trap (not supplied) making use of Seal and Flange.
- Connect hot and cold (½" connection) braided hoses to respective supplies.
- 7. Please attach Comfortneck to the basin.

CLEANING

ALWAYS FOLLOW THE CLEANING INSTRUCTIONS

UPHOLSTERY

All upholstery needs some care; good housekeeping will help to prolong the life of any upholstered products. Avoid extreme temperatures. Extreme cold can make your vinyl prone to cracking, while extreme heat can cause permanent stretching. Avoid exposing your products to direct sunlight for prolonged periods of time.

ALWAYS FOLLOW THE CLEANING INSTRUCTIONS

- Wipe with a clean colourfast cloth dampened with mild alkaline free soap and luke warm water. Do not wet
 excessively.
- Remove all traces of any cleaning product by wiping with fresh water and a clean cloth.
- Dry with a soft, clean cloth.
- · Stubborn grime may require gentle scrubbing with a soft brush.

Do not use:

- hot or boiling water
- hydrocarbons including alcohol
- acetone
- furniture polishes
- bleach
- · concentrated detergents
- abrasive powder or paste cleaners
- steel wool
- silicon or petroleum-based cleaners
- solvent based or abrasive cleaning agents

METAL AREAS

Wipe using regular cleaning products that are recommended for stainless steel and metals.

Do not use:

- acetone
- furniture polishes
 detergent
- bleach
 abrasive cleaners
- steel wool

Damage caused by any improper treatment is not covered by the product warranty.

MAINTENANCE

A periodic inspection of all components and fasteners should be made to ensure that your washlounge is structurally intact and functioning properly.

Damaged and broken parts should be replaced and loose fasteners tightened.

All maintenance to be carried out by a suitably qualified tradesperson.

FOR FUTHER SUPPORT, HOW TO'S & PRODUCT HELP

View installation guides, measurements & specifications, find solutions and more. https://help.comfortel.com.au/hairdressing-basins/zippy/

comfortel

PRODUCT CODE

#1180 ZIPPY TEXTURED BLACK WASHLOUNGE #1185 ZIPPY BLACK WASHLOUNGE

Revision Date: 25.11.2021

©Comfortel Furniture. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without written consent of Comfortel Furniture Pty Ltd.

help.comfortel.com.au

The information contained in this document is subject to change without notice and should not be construed as a commitment by Comfortel Furniture Pty Ltd.

Comfortel Furniture Pty Ltd. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Comfortel Furniture Pty Ltd. shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE

For more information about our products and services, contact us at comfortel.com.au

WARRANTY PERIOD

TERMS AND CONDITIONS. For more information about our warranty, please refer to our website

PURCHASE DATE

INVOICE NUMBER

NOTE YOUR PURCHASE DATE & INVOICE NUMBER FOR FUTURE REFERENCE